


Townscape CT30 MH Manual Hydraulic Folding bollard •VED/0036PB V/7500[N2]/48/90:0.0/1.5 OPERATION

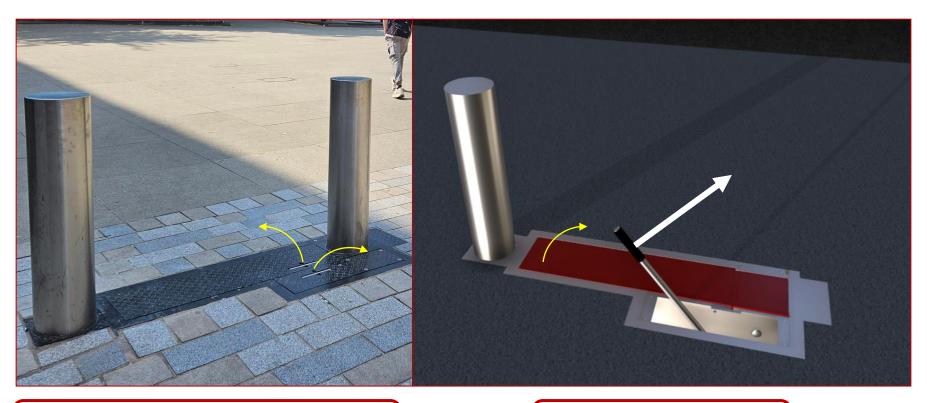




Lift Side Cover and then lift Bollard cover. Unlock hydraulic point and connect lifting hand. Lifting handle is usually retained in bollard cabinet.

OPTIONS - Available with Stainless steel sleeve and as a single foldable bollard

Use handle to 'PUMP' the bollard into position


Townscape CT30 MH Manual Hydraulic Folding bollard •VED/0036PB V/7500[N2]/48/90:0.0/1.5 OPERATION



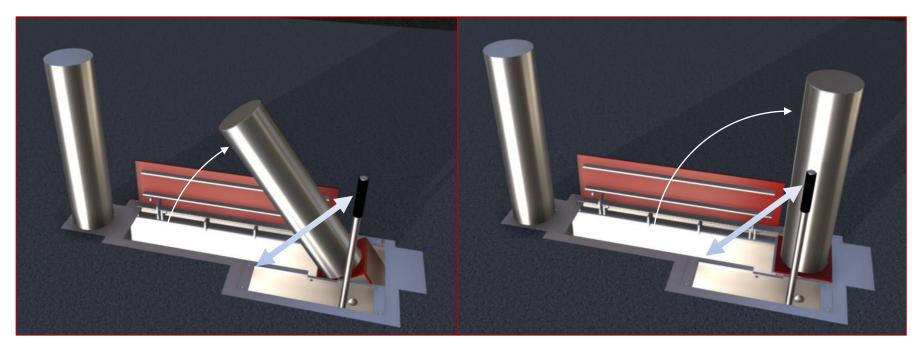


2 Continue to 'PUMP' the bollard into the fully upright position

Once fully 'PUMPED' the bollard will soft lock into position

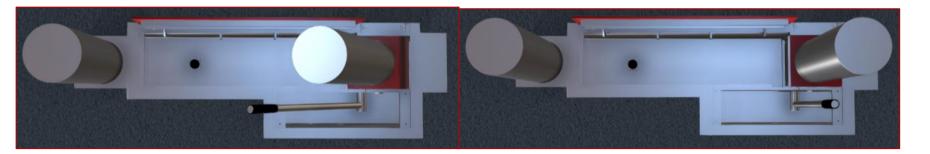



Townscape CT30 MH Manual Hydraulic Folding bollard •VED/0036PB V/7500[N2]/48/90:0.0/1.5 OPERATION



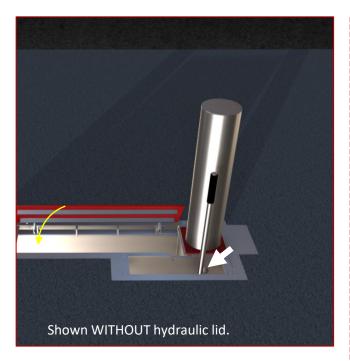

 
Lower the bollard cover, remove handle and LOCK the hydraulic access. Lower hydraulic lid.



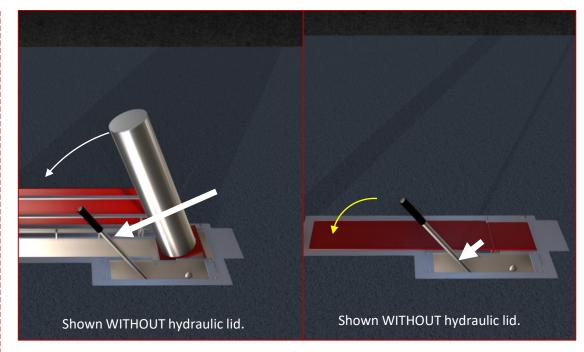

To lower. Reverse the operation and move hydraulic handle fully down to softly lower the bollard

 6 Lower the bollard cover, remove handle and LOCK the hydraulic access. Lower hydraulic lid.



Start at figure 1.